

## USE CONTENT AT YOUR OWN RISK

**THIS POCKET INFORMATION BOOK HAS BEEN CREATED BY KANEPI SERVICES AND IS NOT AFFILIATED WITH OR AUTHORISED BY HONEYWELL INTERNATIONAL INC.**

**THE INFORMATION PROVIDED WITHIN THIS POCKET INFORMATION BOOK ARE EXAMPLES ONLY AND MAY NOT BE APPLICABLE TO YOUR INTENDED APPLICATION OR SYSTEM. AS THE CONTENTS OF THIS BOOKLET ARE FOR INFORMATIVE PURPOSES ONLY IN NO EVENT SHALL THE AUTHOR OR KANEPI SERVICES BE LIABLE TO ANYONE FOR ANY INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR LIABILITIES ARISING OUT OF YOUR USE OF THIS PROVIDED INFORMATION.**

**THIS POCKET INFORMATION BOOK SHOULD NOT BE CONSIDERED TO BE PROFESSIONAL ADVICE AND NO WARRANTY IS PROVIDED AS TO THE ACCURACY OF ANY OF THE INFORMATION CONTAINED HEREIN. WE RECOMMEND THAT YOU SEEK PROFESSIONAL ADVICE BEFORE IMPLEMENTING ANY CHANGES TO APPLICATIONS OR SYSTEMS.**

**KANEPI SERVICES SHALL NOT BE LIABLE FOR ANY LOSSES OR DAMAGES, CONSEQUENTIAL OR OTHERWISE, WITHOUT LIMITATION, WHATSOEVER ARISING FROM THE USE OF, OR RELIANCE ON, THE INFORMATION HEREIN.**

Some information in this Pocket Information Book may create an unreasonable risk for readers who choose to apply or use the information in their own activities or to promote the information for use by third parties.

None of the authors, contributors, sponsors, administrators, kanepi Services or anyone else connected with kanepi Services, in any way whatsoever, can be responsible for your use of the information contained in this Pocket Information Book.

Please take all steps necessary to ascertain that information you read in this Pocket Information Book is correct and has been verified. Double-check all information with independent sources.

While every attempt has been made to verify the information provided herein, the author or kanepi Services cannot assume any responsibilities for errors, inaccuracies or omissions. Any slights of people or organisations are unintentional.

While this information is provided in good faith and is believed to be accurate, kanepi Services disclaims the implied warranties of merchantability and fitness for a particular purpose.

Should you decide to use any of the information contained in this Pocket Information Book then it is your responsibility to ensure that this material is applicable to your system and safe before using it. **If you do not understand the information then do not use it.**

Negative consequences of your usage of the Pocket Information Book content are solely your problem and your responsibility. kanepi Services are not responsible for any negligence and / or personal injury arising from the usage of the content contained within this Pocket Information Book. All consequences of the usage of this content do not involve kanepi Services and its authors at all, ever. You hold full responsibility for your actions.

No consequential damages can be sought against kanepi Services, including but not limited to loss of production. **There is no agreement or understanding between you and kanepi Services** regarding your use or modification of this information.

**DO NOT RELY UPON ANY INFORMATION FOUND IN THIS INFORMATION POCKET BOOK WITHOUT INDEPENDENT VERIFICATION. IN ALL INSTANCES REFER TO THE MANUFACTURERS EQUIPMENT MANUALS FOR CONFIRMATION. IN ALL INSTANCES THE MANUFACTURERS EQUIPMENT MANUALS SHOULD BE CONSIDERED CORRECT OVER ANY INFORMATION PROVIDED IN THIS POCKET INFORMATION BOOKLET.**

**THIS POCKET INFORMATION BOOK IS NOT ENDORSED BY ANY COMPANY.**

Experion®, TotalPlant®, Plantscape®, TDC 3000®, and Universal ControlNetwork® are U.S. registered trademarks of Honeywell International Inc. Other brand or product names are trademarks of their respective owners.

## ABOUT THE POCKET INFORMATION BOOK

This Pocket Information Book is intended for personnel with low to medium levels of Honeywell TDC3000 Distributed Control System (TPS) experience.

The information has been collated over a number of years and includes a large amount of information ranging from general system concepts, one line pieces of useful information, faults and issues that the author and contributors have experienced, through to coding examples.

## GENERAL NOTES

The information contained within this Pocket Information Book does not detail mandatory steps such as 'obtain a permit', 'check for other connections to the point before modifying or deleting', 'ensure all isolations are in place to ensure the safety of personnel', 'ensure the correct node is selected', 'wear an anti-static wrist strap when removing cards' etc. as this is the responsibility of the person performing any work on a control system in accordance to site and company policies.

Requirements for working on control systems are industry, site and company specific. Site and company standards / policies / safety practices must always be adhered to whenever working on control systems.

As a general comment actions such as inactivating points, modifying graphics, shutting down nodes, deleting files, removing system cards etc. (not an exhaustive list) should only be performed on control systems if you are aware of the consequences of doing so and this action has been approved by the system responsible person and in adherence to any and all company safety requirements (such as a change management approval and permit to work etc.).

## POCKET INFORMATION BOOK TYPOGRAPHICAL CONVENTIONS

The Pocket Information Book uses the following typographical conventions:

1. The word **SELECT** typically refers to a target on a display.
2. The word **PRESS** typically refers to a button on a keyboard (inclusive of integrated operator keyboards and engineering keyboards).
3. Menu or action paths are shown as **MENU > SUBMENU** etc.
4. Code extracts / typed commands are shown in `Courier New` font.

## Table Of Contents

<b>1</b>	<b>Control Language (CL)</b> .....	<b>9</b>
1.1	Overview .....	9
1.2	Guidelines .....	11
1.2.1	Use of COMMENTS .....	11
1.2.2	Use of REVISION history .....	12
1.2.3	Determining which PARAMETERS CL can access .....	12
1.2.4	Use of SUBROUTINES .....	12
1.2.5	Maintaining CODE FLOW .....	13
1.3	General Information - common .....	14
1.3.1	Statements – across more than one line .....	14
1.3.2	Labels .....	14
1.3.3	Loops .....	15
1.3.4	Arrays .....	18
1.3.5	Issuing messages to the MESSAGE SUMMARY .....	19
<b>2</b>	<b>Application Module Control Language (AMCL)</b> .....	<b>20</b>
2.1	General Information .....	20
2.1.1	BACKGROUND and FOREGROUND processing .....	20
2.1.2	AMCL types – POINT SPECIFIC and GENERIC .....	21
2.1.3	AMCL block structure .....	22
2.1.4	Point TYPES that AMCL may be attached / linked to .....	26
2.1.5	Maximum CL blocks attached / linked .....	26
2.1.6	Block names – limited to 8 characters .....	26
2.1.7	CL INSERTION points .....	27
2.1.8	LOCAL variables .....	28
2.1.9	STANDARD point parameters .....	29
2.1.10	Date and Time FORMATS .....	30
2.1.11	External POINT.PARAMETER referencing .....	32
2.1.12	UPDATE LIBRARY (-UL) directive .....	32
2.1.13	Object Code (.AO) – number of versions in a unit .....	33
2.1.14	Printing CL code .....	33
2.1.15	Viewing OPERATOR commands made to CL .....	34
2.1.16	BACKWARD BRANCH in AMCL .....	35
2.1.17	Post Store ERRORS .....	35
2.1.18	Parameter List NAMES .....	36
2.2	Coding .....	37
2.2.1	Developing an AMCL scheme – an overview .....	37
2.2.2	Editing CL code .....	55
2.2.3	LINKING AMCL to a POINT .....	57
2.2.4	Viewing COMPILE ERRORS - .LE files .....	58
2.2.5	Identifying code error LOCATIONS .....	58
2.2.6	Search CL code for reference to CDS parameters / points .....	60
2.2.7	BAD VALUES in AMCL .....	60
2.2.8	EXISTS function .....	62
2.2.9	BKG_DELAY – halt the block for a period of time .....	62
2.2.10	EQUAL_NULL_POINT_ID check .....	63

2.2.11	INFINITES and DIVISION BY ZERO .....	63
2.2.12	Use of WHEN statement in BLOCK HEADERS.....	64
2.2.13	Use of WHEN statement in code .....	64
2.2.14	Conditional execution of blocks .....	65
2.2.15	DATE_TIME and NUMBER(NOW) use .....	65
2.2.16	Min / Max .....	66
2.2.17	Resetting CDS type TIME parameters.....	66
2.2.18	Use of \$ORD for FLAGS.....	66
2.2.19	Stop code failing / referencing DELETED points in a CDS .....	68
2.2.20	Checking for CL ERRORS – parameter CLERRSUM .....	69
2.2.21	Checking for first block RUN – parameter 'RESTART .....	70
2.2.22	INACTIVATING specific CL on a bound data point.....	71
2.2.23	PPS (Point Process Special) a point via CL.....	72
2.2.24	AMCL writing to HPM REG CTL OP – RCASOPT = DDC.....	72
2.2.25	AMCL writing to HPM REG CTL SP – RCASOPT = SPC.....	74
2.2.26	Resetting Totalisers via AMCL.....	75
2.2.27	STARTING and STOPPING Process Module points .....	75
2.2.28	Disabling / Enabling / Inhibiting alarms .....	76
2.3	Enumerations.....	77
2.3.1	Enumeration structure.....	77
2.4	Parameter Lists.....	78
2.4.1	Parameter List structure.....	78
2.5	Custom Data Segments (CDS).....	81
2.5.1	General Information .....	81
2.5.2	CDS structure .....	82
2.5.3	CDS parameter names – limited to 8 characters .....	85
2.5.4	Setting ARRAY CDS values .....	85
2.5.5	Use of \$REG_CTL.....	86
2.5.6	CDS packages display in REVERSE to DEB configuration .....	86
2.5.7	Changing a TIME type CDS parameter .....	88
2.5.8	Setting long STRING CDS parameters via DATACHNG .....	89
2.5.9	Set an ENTITY type CDS parameter to NULL POINT ID.....	91
2.5.10	Overwriting CUSTOM DATA SEGMENTS – OCD.....	92
2.5.11	Set ENTITY type parameters as NULL during a build .....	93
2.5.12	Back up .SE / .SP files after a CL compile .....	94
2.6	Issues Encountered .....	95
2.6.1	CORRUPT CL – recovery method.....	95
2.6.2	Attempted to add a CDS that has not been compiled.....	99
2.6.3	CDS compile – SEGMENT SIZE EXCEEDED.....	99
2.6.4	MAXIMUM number of files EXCEEDED during a compile .....	100
2.6.5	Unexpected text error – caused by File Transfer .....	101
2.6.6	Link error – Compile type does not match actual type .....	102
2.6.7	Link error – NULL ID found .....	103
2.6.8	Link error – MAX CL's reached.....	104
2.6.9	DATA TYPE not found in system during a compile.....	105
2.6.10	ERROR ** DA error getting point parameters, se_stat.....	105
2.7	AMCL Code examples .....	107
2.7.1	Set CALC POINT C1/C2 parameters to PVEUHI / PVEULO.....	107

2.7.2	Store AM STATISTICS to CDS parameters.....	108
2.7.3	SERIAL INTERFACE logical STATE CHANGE counter.....	111
2.7.4	Copy an entire CDS from one point to another.....	126
2.7.5	Experion OPC STATUS point REVERSAL on TPS.....	130
2.7.6	FSC Second Fault Time MONITORING and ALERTING.....	134
2.7.7	UCN node control STATE / CHECKPOINTING enforcing.....	144
2.7.8	Snapshot 50 process variables at 0600.....	146
2.7.9	Writing TEXT FILES.....	156
2.7.10	Monitoring DCS NODES.....	163
2.7.11	Capture ALARM STATISTICS.....	176
<b>3</b>	<b>Process Module Control Language (PMCL).....</b>	<b>181</b>
3.1	General Information.....	181
3.1.1	PHASES and BRANCHING information.....	181
3.1.2	.NO object code name meaning.....	182
3.1.3	Determining PMCL associated .NO file.....	183
3.1.4	.NO object code DIRECTORY location.....	183
3.1.5	PMCL block structure.....	184
3.1.6	LOCAL variables.....	189
3.2	Coding.....	190
3.2.1	UPDATING PMCL code.....	190
3.2.2	STOP a running PMCL sequence.....	191
3.2.3	Set the Process Module STATE to OFF.....	192
3.2.4	START a PMCL sequence.....	194
3.2.5	LOAD PMCL code to a Process Module point.....	194
3.2.6	PMCL writing to HPM REG CTL outputs.....	196
3.2.7	Changing DIGITAL COMPOSITE points OP parameter.....	197
3.2.8	Serial Interface ERROR handling in PMCL.....	197
3.2.9	Referencing BOX data.....	199
3.2.10	Referencing DIGITAL INPUTS via Hardware Addresses.....	200
3.2.11	READ data from another HPM.....	201
3.2.12	Delaying via WAIT statement.....	202
3.2.13	Changing DIGITAL OUTPUT states.....	202
3.3	Issues Encountered.....	204
3.3.1	Incorrect use of ABNORMAL HANDLERS.....	204
3.3.2	Sequence slot size too SMALL when LOADING.....	206
3.3.3	Recovering from a E108 CONFIGURATION MISMATCH.....	206
3.4	PMCL Code examples.....	208
3.4.1	Setup key controllers after a shutdown (MODE / OP).....	208
3.4.2	Open JT valve – gas train saver.....	211
<b>4</b>	<b>Subroutine examples.....</b>	<b>217</b>
4.1	VALCHECK – check for bad value / store result to a local.....	217
4.2	CLFAULTS – recording CL error information.....	218
4.3	PEAK – store a maximum value.....	222
4.4	AVERAGE – calculate an average for an input value.....	223
4.5	TIMECHK – determine if a specific time has occurred.....	226
4.6	SETFLAG – set multiple flag points to \$ord0 (bottom box).....	230
4.7	CONCAT_STR – concatenates two strings (AMCL).....	231

<b>5</b>	<b>Glossaries .....</b>	<b>234</b>
5.1	Glossary of Terms.....	234
5.2	Glossary of Parameters .....	243
5.3	Glossary of File Type Suffixes .....	248

**[www.kanepiservices.com.au](http://www.kanepiservices.com.au)**