

USE CONTENT AT YOUR OWN RISK

THIS POCKET INFORMATION BOOK HAS BEEN CREATED BY KANEPI SERVICES AND IS NOT AFFILIATED WITH OR AUTHORISED BY HONEYWELL INTERNATIONAL INC.

THE INFORMATION PROVIDED WITHIN THIS POCKET INFORMATION BOOK ARE EXAMPLES ONLY AND MAY NOT BE APPLICABLE TO YOUR INTENDED APPLICATION OR SYSTEM. AS THE CONTENTS OF THIS BOOKLET ARE FOR INFORMATIVE PURPOSES ONLY IN NO EVENT SHALL THE AUTHOR OR KANEPI SERVICES BE LIABLE TO ANYONE FOR ANY INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR LIABILITIES ARISING OUT OF YOUR USE OF THIS PROVIDED INFORMATION.

THIS POCKET INFORMATION BOOK SHOULD NOT BE CONSIDERED TO BE PROFESSIONAL ADVICE AND NO WARRANTY IS PROVIDED AS TO THE ACCURACY OF ANY OF THE INFORMATION CONTAINED HEREIN. WE RECOMMEND THAT YOU SEEK PROFESSIONAL ADVICE BEFORE IMPLEMENTING ANY CHANGES TO APPLICATIONS OR SYSTEMS.

KANEPI SERVICES SHALL NOT BE LIABLE FOR ANY LOSSES OR DAMAGES, CONSEQUENTIAL OR OTHERWISE, WITHOUT LIMITATION, WHATSOEVER ARISING FROM THE USE OF, OR RELIANCE ON, THE INFORMATION HEREIN.

Some information in this Pocket Information Book may create an unreasonable risk for readers who choose to apply or use the information in their own activities or to promote the information for use by third parties.

None of the authors, contributors, sponsors, administrators, kanepi Services or anyone else connected with kanepi Services, in any way whatsoever, can be responsible for your use of the information contained in this Pocket Information Book.

Please take all steps necessary to ascertain that information you read in this Pocket Information Book is correct and has been verified. Double-check all information with independent sources.

While every attempt has been made to verify the information provided herein, the author or kanepi Services cannot assume any responsibilities for errors, inaccuracies or omissions. Any slights of people or organisations are unintentional.

While this information is provided in good faith and is believed to be accurate, kanepi Services disclaims the implied warranties of merchantability and fitness for a particular purpose.

Should you decide to use any of the information contained in this Pocket Information Book then it is your responsibility to ensure that this material is applicable to your system and safe before using it. **If you do not understand the information then do not use it.**

Negative consequences of your usage of the Pocket Information Book content are solely your problem and your responsibility. kanepi Services are not responsible for any negligence and / or personal injury arising from the usage of the content contained within this Pocket Information Book. All consequences of the usage of this content do not involve kanepi Services and its authors at all, ever. You hold full responsibility for your actions.

No consequential damages can be sought against kanepi Services, including but not limited to loss of production. **There is no agreement or understanding between you and kanepi Services** regarding your use or modification of this information.

DO NOT RELY UPON ANY INFORMATION FOUND IN THIS INFORMATION POCKET BOOK WITHOUT INDEPENDENT VERIFICATION. IN ALL INSTANCES REFER TO THE MANUFACTURERS EQUIPMENT MANUALS FOR CONFIRMATION. IN ALL INSTANCES THE MANUFACTURERS EQUIPMENT MANUALS SHOULD BE CONSIDERED CORRECT OVER ANY INFORMATION PROVIDED IN THIS POCKET INFORMATION BOOKLET.

THIS POCKET INFORMATION BOOK IS NOT ENDORSED BY ANY COMPANY.

Experion®, TotalPlant®, Plantscape®, TDC 3000®, and Universal ControlNetwork® are U.S. registered trademarks of Honeywell International Inc. Other brand or product names are trademarks of their respective owners.

ABOUT THE POCKET INFORMATION BOOK

This Pocket Information Book is intended for personnel with low to medium levels of Honeywell TDC3000 Distributed Control System (TPS) experience.

The information has been collated over a number of years and includes a large amount of information ranging from general system concepts, one line pieces of useful information, faults and issues that the author and contributors have experienced, through to coding examples.

GENERAL NOTES

The information contained within this Pocket Information Book does not detail mandatory steps such as 'obtain a permit', 'check for other connections to the point before modifying or deleting', 'ensure all isolations are in place to ensure the safety of personnel', 'ensure the correct node is selected', 'wear an anti-static wrist strap when removing cards' etc. as this is the responsibility of the person performing any work on a control system in accordance to site and company policies. Requirements for working on control systems are industry, site and company specific. Site and company standards / policies / safety practices must always be adhered to whenever working on control systems.

As a general comment actions such as inactivating points, modifying graphics, shutting down nodes, deleting files, removing system cards etc. (not an exhaustive list) should only be performed on control systems if you are aware of the consequences of doing so and this action has been approved by the system responsible person and in adherence to any and all company safety requirements (such as a change management approval and permit to work etc.).

POCKET INFORMATION BOOK TYPOGRAPHICAL CONVENTIONS

The Pocket Information Book uses the following typographical conventions:

1. The word **SELECT** typically refers to a target on a display.
2. The word **PRESS** typically refers to a button on a keyboard (inclusive of integrated operator keyboards and engineering keyboards).
3. Menu or action paths are shown as **MENU > SUBMENU** etc.
4. Code extracts / typed commands are shown in `Courier New` font.

Table Of Contents

1	System Concepts	13
1.1	POINTS explained	13
1.2	UNIT concept explained	13
1.3	AREA explained	14
1.4	Relationship between POINTS, UNITS, AREAS and CONSOLES	14
1.5	Point TYPES - an overview	15
1.6	DATA types	20
1.7	INPUT / OUTPUT signal types	21
1.8	Controller MODES	24
1.9	Controller MODE ATTRIBUTES	25
1.10	NORMAL mode for controllers	25
1.11	FORWARD and REVERSE acting loops	25
1.12	CASCADE control explained	26
1.13	PV Tracking explained	28
1.14	INITIALISATION explained	28
1.15	GROUPS explained	29
1.16	Operator Station KEYBOARD	30
1.17	ACCESS LEVELS	31
1.18	CHECKPOINTING explained	32
1.19	System ENTITY NAME formats	32
1.20	Alarming	33
1.20.1	Alarm States	33
1.20.2	Alarm Priorities	33
1.20.3	Alarm types – overview	34
1.20.4	Commonly used alarm types – descriptions	35
2	System Guidelines	38
2.1	Point DESCRIPTIONS	38
2.2	BADPV handling	38
2.3	Process Variable FILTERING	38
2.4	Analogue points Alarm DEADBAND	39
2.5	Extended Ranges	40
2.6	PV Clamping	40
2.7	Digital point Alarm DELAY time	40
2.8	Equipment status – Command DISAGREE	41
2.9	Controller EQUATION B (EQB)	41
3	System Displays	42
3.1	Alarm Summary	42
3.1.1	Alarms ACTIVE on Alarm Summary after DELETION	44
3.2	System Menu	44
3.2.1	Viewing USER AVERAGES	45
3.2.2	Assigning PRINTER functions	46
3.2.3	Create TEMPORARY Operating Groups	46
3.2.4	CORRUPT Custom Names	47
3.3	Organizational Summary Menu	50
3.3.1	Pathname for Native Window / GUS schematic search	52

3.3.2	Adding a new DIRECTORY to PATHNAME CATALOG	53
3.4	Console Status.....	54
3.4.1	DISABLE / ENABLE all alarms for a specific UNIT	56
3.5	System Status.....	56
3.5.1	TOP SECTION – system information.....	57
3.5.2	MIDDLE SECTION – LCN node statuses	57
3.5.3	BOTTOM SECTION – command targets	58
3.5.4	Starting a TPS system that has been DEPOWERED	58
3.5.5	Locating a SPARE SLOT	59
3.5.6	Clearing NODE LOAD FAILURES (via the System Stat).....	60
3.5.7	Setting the DCS CLOCK.....	60
3.6	Network / Hiway Status.....	61
3.6.1	TOP SECTION – status of the UCN	61
3.6.2	MIDDLE SECTION – status of the UCN nodes	61
3.6.3	BOTTOM SECTION – command targets	63
3.7	Detail Status.....	65
3.7.1	TOP SECTION – status of the node	66
3.7.2	MIDDLE SECTION – modules status	67
3.7.3	BOTTOM SECTION – command targets	68
4	Tuning	72
4.1	Initial TUNING values	72
4.2	Tuning Parameter information.....	72
4.3	Use of T2 (derivative) on inlet separators (oil and gas).....	73
4.4	Use of TIME FILTERS (TF) on control loop INPUTS	74
5	Backups.....	75
5.1	Creating BACKUP Executable Commands.....	75
5.2	Creating FASTLOAD Executable Commands.....	82
5.3	Check Backups on REMOVABLE MEDIA for CORRUPTION	88
6	Engineering Functions	89
6.1	Engineering Main Menu	89
6.1.1	Overview.....	89
6.1.2	FUNCTION keys referenced.....	90
6.2	Network Configuration File.....	91
6.2.1	NCF WORKING file (.WF) – correct way to EXIT	92
6.2.2	NCF Status display	93
6.2.3	Alarm Summary timestamps / NCF install	93
6.2.4	Protect the NCF file / PREVENT unauthorized ACCESS	94
6.2.5	Performing an NCF CHANGE / INSTALL	95
6.2.6	Adding a LOAD MODULE to a GUS.....	96
6.3	Command Processor Commands	99
6.3.1	COMMANDS - general information.....	99
6.3.2	HELP in Command Processor	100
6.3.3	File names	100
6.3.4	Using NET or PN to reference HM's	100
6.3.5	Removable Media - \$F reference	101
6.3.6	DATA OUT command	101
6.3.7	PRINT command	101

6.3.8	LIST Command.....	102
6.3.9	LIST command - SORT by DATE	103
6.3.10	MOVE command	104
6.3.11	COPY command.....	105
6.3.12	RENAME command.....	106
6.3.13	DELETE command	106
6.3.14	Deleting files from the HM using 'DEL' command.....	106
6.3.15	CREATE VOLUME command	107
6.3.16	COPY VOLUME command.....	108
6.3.17	CREATE DIRECTORIES command	108
6.3.18	DELETE DIRECTORY command	109
6.3.19	COMPILE command.....	109
6.3.20	NO LIST additional command.....	110
6.3.21	LINK command	110
6.3.22	INACTIVATE command.....	110
6.3.23	ACTIVATE command.....	111
6.3.24	PROTECT and UNPROTECT command.....	111
6.3.25	SET PATHS command	111
6.3.26	NCF BACKUP PATH – set pathnames screen	112
6.4	Executable Commands.....	114
6.4.1	Invoking an EC file.....	114
6.4.2	Commands	114
6.4.3	Unlink / Link and Compile EC example.....	120
6.4.4	Compile Multiple CL blocks EC example	121
6.5	Data Entity Builder	122
6.5.1	Escape to COMMAND PROCESSOR from DEB.....	122
6.5.2	Return to DEB from COMMAND PROCESSOR.....	122
6.5.3	Invoking the DEB from COMMAND PROCESSOR	122
6.5.4	Deleting system ENTITIES / POINTS.....	122
6.5.5	Build NEW POINTS – via NODE TYPE.....	123
6.5.6	Build NEW POINTS – via RECONSTITUTE METHOD	125
6.5.7	Create an EXCEPTION BUILD (EB) file	127
6.5.8	LOADING Points from an EB FILE via the DEB	128
6.5.9	BULK EXCEPTION BUILD points to a single EB file	130
6.5.10	Create an EXCPTION BUILD (EB) file for a NODE	131
6.5.11	MODIFY EXISTING POINT - via RECONSTITUTE method.....	133
6.5.12	Changing the UNIT for an EXISTING point.....	134
6.5.13	Attempting to LOAD points that are ACTIVE	136
6.5.14	Changing NUMBER OF INPUTS to '0' - SWITCH ALG.....	136
6.5.15	TOO MANY PRIMARIES error in DEB – CASCADED SP.....	137
6.5.16	REMOVE a SERIAL INTERFACE card from HPM config.....	137
6.5.17	Using ALTER PARAMETERS	139
6.5.18	Creating OPERATING groups	141
6.6	History Groups.....	143
6.6.1	Adding a POINT.PARAMETER to a History Group	143
6.6.2	Increasing CONTINUOUS HISTORY for a History Group.....	144
6.7	Find Names.....	145
6.7.1	PUSHING and PULLING philosophy	145

6.7.2	Points and Entities	147
6.7.3	Accessing FIND NAMES	147
6.7.4	Find Names GENERAL FIELD descriptions	148
6.7.5	Difference between ENTITIES / POINTS BUILT search.....	150
6.7.6	Find reference to ENTITIES – UCN search	150
6.7.7	Find references to PM SEQUENCES – UCN search.....	153
6.7.8	Find reference to BOTH (PM sequences / point) – UCN	154
6.7.9	Find reference to POINTS BUILT - UCN	157
6.7.10	Find reference to ENTITIES – AM search.....	158
6.7.11	Find reference to CL BLOCKS – AM search.....	160
6.7.12	Find reference to CUSTOM DATA SEGMENTS – AM search.....	161
6.7.13	HISTORY GROUP search.....	162
6.7.14	BUTTON FILE search.....	163
6.8	Documentation Tool.....	165
6.8.1	Accessing DOCUMENTATION TOOL (Doc Tools).....	165
6.8.2	Listing SEQUENCE OF EVENTS	165
6.8.3	OUTPUT Doc Tool query results - TEXT file on the HM	166
6.8.4	BUILD / SAVE a NEW Doc Tools query – (SAVED query)	167
6.8.5	DELETE a PRE-DEFINED Doc Tools query.....	168
6.8.6	Useful Doc Tools Query – LIST AM points in ALARM	168
6.8.7	Useful Doc Tools query – LIST UCN points in ALARM.....	169
6.8.8	Useful Doc Tools query – Controller Study	170
6.8.9	Useful Doc Tools query – List DIS / INH alarms	172
6.8.10	Useful Doc Tools query – list of all TUNING parameters	173
6.8.11	Useful Doc Tools query – get BLKNAME / AM points.....	174
6.9	Picture Editor (PE)	175
6.9.1	Invoking Picture Editor	175
6.9.2	CANCEL key.....	175
6.9.3	General commands	175
6.9.4	Date and Time FORMATS.....	178
6.9.5	Change CURSOR to move by 1 PIXEL	180
6.9.6	Set text size LARGE	180
6.9.7	Set text size SMALL.....	181
6.9.8	READ (open) a schematic in PE for EDITING	182
6.9.9	COMPILING a schematic.....	182
6.9.10	Copy .DO file to required system PATHNAME location	183
6.9.11	Add VALUE.....	184
6.9.12	Add TIME / DATE as a value	185
6.9.13	Add CONDITION	186
6.9.14	COPYCLIP command	187
6.9.15	Set ROLL command	188
6.9.16	Invoke another SCHEMATIC via a target	190
6.9.17	Prompting for an ENTER EXECUTE via a target.....	191
6.9.18	Display / Reserved DATABASE VARIABLES.....	191
6.9.19	Setting a DISPLAY DATABASE ENTITY / call a schem	192
6.9.20	DETAIL a local entity variable.....	192
6.9.21	DEFINIE INITIAL action	193
6.9.22	DEFINE FINAL action	194

6.9.23	DEFINE PAGE FORWARD action.....	195
6.9.24	DEFINE PAGE BACK action	196
6.9.25	Add a PAGE NUMBER for multi-paged schematics	198
6.9.26	Invoking DOC TOOL queries	201
6.9.27	Adding TRENDS to schematics	202
6.9.28	Checking the STATION KEY LEVEL via a Target	202
6.9.29	Set station to ENGINEER key level via a TARGET	202
6.9.30	Console KEYSWITCH issue	203
6.9.31	Using custom built ENUMERATIONS.....	204
6.10	Button Configurator.....	206
6.10.1	Assigning COMMANDS to BUTTONS.....	206
6.10.2	Setting a BUTTON to change KEYLEVEL to ENGINEER.....	207
6.10.3	Command for invoking the ALARM SUMMARY	208
6.10.4	Set an ENTITY VARIABLE and call a GRAPHIC.....	209
6.11	GUS Display Builder	210
6.11.1	MODIFY an EXISTING GUS graphic.....	210
6.11.2	Changing the station KEY LEVEL.....	211
6.11.3	Show a CONFIRMATION box	212
6.11.4	Setting PROCESS MODULE point FLAGS	212
6.11.5	Reference Process Module points SEQERR / SEQEXEC.....	213
6.11.6	Making text VISIBLE / HIDDEN	213
6.12	PERFMENU.....	215
6.12.1	Changing POINT.PARAMETER values	215
6.13	Direct Data Exchange (DDE)	218
6.13.1	UPDATE DDE data.....	218
6.13.2	MODIFYING DDE expressions.....	218
6.13.3	MANUAL update of calculations	218
6.14	Virtual Printers	219
6.14.1	Determining if VIRTUAL PRINTERS are configured.....	219
6.14.2	Print EVENT HISTORY to a Virtual Printer	221
6.14.3	CONFIGURE Virtual Printers / OUTPUT to a VP	221
6.15	Batch Files	232
6.15.1	Transferring GUS files between GUS stations via batch.....	232
6.15.2	Copying files from the HM.....	232
6.15.3	Copying HM files via batch based on DATES.....	233
6.16	Command Prompt.....	234
6.16.1	Help	234
6.16.2	-T extension	235
6.16.3	Changing pathname	236
6.16.4	COPYING entered commands.....	236
6.16.5	AT scheduler.....	237
6.16.6	ADD ROUTE.....	238
6.16.7	IP Configuration	238
7	Point Information	239
7.1	Length of TAGNAMES.....	239
7.2	Detailing ASSOCIATED points	239
7.3	Change POINT DESC for ACTIVE points - DATACHNG.....	240

7.4	Changing REG CTL HPM parameters – INACTIVATING points.....	242
7.5	REG CTL OP response when INACT / ACT PTEXECST	243
7.6	Changing RCASOPT for regulatory controllers.....	244
7.7	SPEUHI/LO values on regulatory controllers	246
7.8	Regulatory controllers output (OP) connections.....	246
7.9	Regulatory controllers – RED TAG	246
7.10	Digital composite points - TIMING ability	246
7.11	Digital composite points – changing OP state.....	247
7.12	Digital outputs – forcing DO's.....	247
7.13	Digital input points - configuring for SOE reporting	247
7.14	Digital input signals - LATCHING.....	247
7.15	Process module points – changing FLAG states	248
8	Local Control Network (LCN).....	249
8.1	States for LCN nodes when LOADING	249
8.2	LCN Cables.....	249
8.2.1	System cable failures.....	249
8.2.2	LCN cable swapping - DISABLED	250
8.2.3	Cable SUSPECT after RESETTING LCNP card	250
8.3	LCN Configuration	250
8.3.1	LCN node ADDRESSING	250
8.4	History Module (HM)	250
8.4.1	Shutdown and restart a HM	250
8.4.2	History collection DISABLED if HM de-powered	251
8.4.3	Enable history collection	251
8.4.4	FILE IS OPEN BY ANOTHER USER error	251
8.4.5	HM Error code 190	252
8.5	Application Module (AM).....	253
8.5.1	Determining AM loading.....	253
8.5.2	Saving the AM	254
8.5.3	Loading an AM that has NO CHECKPOINT	255
8.5.4	Background Tasks	257
8.5.5	UNIT assignment	257
8.5.6	FAIL AM message during a checkpoint	257
8.5.7	AM ISOLATED state - recovery	258
8.5.8	AM Watchdog timeout.....	258
8.5.9	AM FPP use.....	258
8.5.10	LED 2 on an AM	259
8.6	Global User Station (GUS).....	260
8.6.1	Loading a GUS via the LCNP card	260
8.6.2	Mounting EMULATED DISKS (.LCN files)	261
8.6.3	Emulated disks – dragging.....	261
8.6.4	Emulated disk – SIZE ALLOCATION.....	261
8.6.5	Create an EMULATED DISK (.LCN file)	262
8.6.6	FORMAT an emulated disk.....	263
8.6.7	No Access to GUS MENU ITEMS	266
8.6.8	STARTING the FILE TRANSFER service on a GUS	266
8.6.9	Configure specific FILE EXTENSIONS for file transfer.....	267

8.6.10	Cannot view HM – start file transfer	269
8.6.11	File transfer FAULT finding	269
8.6.12	Specifying TIMEOUT value for file transfer	270
8.6.13	Connecting GUS to a HM to allow file transfers	270
8.6.14	File transfer – use two screens	272
8.6.15	Establishing communications to a remote PC	272
8.6.16	Installing anti-virus software	273
8.6.17	Installing anti-virus software updates	273
8.6.18	Viewing GUS LICENSE details	273
8.6.19	Starting NATIVE WINDOW via a BATCH file	274
8.6.20	Resetting LCNP cards – OPC	274
8.6.21	Embedded Display errors	275
8.6.22	Area display database search – path not complete	275
8.6.23	Equipment List builder error – load modules missing	275
8.6.24	GUS COMMUNICATIONS – loss of native window	276
8.6.25	GUS AUTO RESTART on INIT error	276
8.7	Universal Stations (US)	278
8.7.1	US Loading - from the CONSOLE LOAD button	278
8.7.2	US Loading – from System Status	278
8.7.3	PCDE Program – information	278
8.8	Network Interface Module (NIM)	280
8.8.1	NIM's – swapping PRIMARY and BACKUP roles	280
8.8.2	Shutdown REDUNDANT NIM's	280
8.8.3	Loading a NIM that is in the QUALIFY state	281
8.8.4	Replace the UCN MODEM card in a NIM	281
8.8.5	NIM Library	283
8.8.6	\$UG_MISTY error	283
8.9	Checkpoint	284
8.9.1	Performing a MANUAL checkpoint – recommendation	284
9	Universal Control Network (UCN)	285
9.1	UCN CONTROL states	285
9.2	UCN Cables	285
9.2.1	UCN network overview	285
9.2.2	UCN cable faults - general information	286
9.2.3	Loose TERMINATOR causes UCNB cable fault	287
9.3	Advanced Process Manager (APM)	289
9.3.1	Replacing APM Input / Output (I/O) cards	289
9.3.2	PARITY Error – reseal APM COMM card	290
9.4	High Performance Manager (HPM)	291
9.4.1	Communications / control card DIAGNOSTICS display	291
9.4.2	SHUTDOWN a HPM	291
9.4.3	LOAD a HPM	292
9.4.4	Start a HPM / IOP from the NETWRK / HWY display	293
9.4.5	Start a HPM / IOP from the DETAIL status display	294
9.4.6	HPMM RECOVER target	294
9.4.7	Configuring DI Sequence Of Events (SOE) cards	295
9.4.8	Configuring a new IOP card – DI example	295

9.4.9	REMOVING an IOP card from the HPM configuration.....	296
9.4.10	Removing HPM IOP cards – DEB anomaly.....	297
9.4.11	IO LINK – viewing PERCENTAGE (%) FREE.....	298
9.4.12	HPMM LCBATTFL fault.....	298
9.5	Input / Output Processors (IOP).....	299
9.5.1	IOP card indicators.....	299
9.5.2	Locating and diagnosing an IOP with a fault.....	299
9.5.3	REPLACE an IOP (i.e. AI / AO / DI / DO).....	301
9.5.4	Digital Input FTA and DI SOE FTA compatibility.....	301
9.5.5	SI IOP FTA's – maximum number of Arrays.....	302
9.5.6	Serial Interface FTA1FAIL fault.....	302
9.5.7	Serial Interface F1NOTCAL fault.....	302
9.5.8	STIM card fault.....	303
9.6	Logic Managers (LM).....	304
9.6.1	Entering PROGRAM mode.....	304
9.6.2	Searching in LOADER.....	304
9.6.3	Changing the PRESET for a TIMER.....	304
9.6.4	DELETING a line of LADDER code.....	304
9.6.5	INSERT a line in LOADER.....	305
9.6.6	EDIT current line being viewed.....	305
9.6.7	DELETE BIT.....	305
9.6.8	Locating a SPARE COIL.....	305
9.6.9	PRINT LM ladder code.....	306
9.7	Safety Manager Modules (SMM).....	307
9.7.1	SMM Failure – restarting SMM's from the FAIL state.....	307
9.8	Checkpoint.....	308
9.8.1	Performing a MANUAL checkpoint – recommendation.....	308
10	Glossaries.....	309
10.1	Glossary of Terms.....	309
10.2	Glossary of Parameters.....	319
10.3	Glossary of Keys.....	324
10.4	Glossary of File Type Suffixes.....	327

www.kanepiservices.com.au